

Configurar interfaz LTE

Para configurarlo vamos a Interfaces/LTE APNs =====

Para Vodafone

- name → Vodafone
- APN → ac.vodafone.es
- IP Type → IPv4
- Use Peer DNS → true
- Add default route → true
- Authentication → CHAP
- user → vodafone
- password → vodafone

The screenshot shows the 'LTE APNs' configuration window. On the left, a table lists APNs with columns 'Name' and 'APN'. The entry 'Vodafone' with APN 'ac.vodafone.es' is selected. The main configuration area for 'LTE APN <Vodafone>' contains the following fields and values:

Field	Value
Name	Vodafone
APN	ac.vodafone.es
IP Type	IPv4
Use Peer DNS	☒
Add Default Route	☒
Default Route Distance	2
IPv6 Interface	none
Authentication	CHAP
User	vodafone
Password	*****
Passthrough Interface	none

On the right side of the configuration area, there are buttons: OK, Cancel, Apply, Comment, Copy, and Remove. At the bottom left, it says '1 item (1 selected)'.

Interfaz LTE

Interface List

Interface | Interface List | Ethernet | EoIP Tunnel | IP Tunnel | GRE Tunnel | VLAN | VRRP | Bonding | LTE

Find

Name	Type	MTU	Actual MTU	L2 MTU	Tx	Rx	Tx Packet (p/s)	Rx Packet (p/s)	FP Tx	FP Rx	FP T
Conexión a Internet											
lte1	LTE	1500	1500		0 bps	0 bps	0	0	0 bps	0 bps	

Interface <lte1>

General | Cellular | Status | Traffic

Name: lte1

Type: LTE

MTU: 1500

Actual MTU: 1500

L2 MTU:

MAC Address: AC:50:43:1A:EE:FD

Network Mode: ☒ GSM ☒ 3G ☒ LTE

Bands: ☒ 1 ☒ 3 ☒ 7 ☒ 20 ☒ 8 ☒ 2 ☒ 38 ☒ 40 ☒ 41 ☒ 39 ☒ 5 ☒ 12 ☒ 17 ☒ 25 ☒ 26

PIN: ****

Operator:

Modem Init:

APN Profile: Vodafone

☐ Allow Roaming

Manufacturer: MikroTik

Model: R11e-LTE6

Revision: R11e-LTE6_V025

enabled | running | slave

OK
Cancel
Apply
Disable
Comment
Torch
Scan...
Cell Monitor...

<https://soporte.syscom.mx/es/articles/2381987-mikrotik-configuracion-modem-lte>

From:

<https://intrusos.info/> - LCWIKI

Permanent link:

<https://intrusos.info/doku.php?id=hardware:mikrotik:lte&rev=1674825193>

Last update: **2023/01/27 14:13**

