

# PoE

## Deshabilitar PoE en todos los interfaces

```
set poe interface all disable
```

## Deshabilitar PoE en un interfaz específico

```
set poe interface ge-0/0/0 disable
```

From:

<https://intrusos.info/> - LCWIKI

Permanent link:

<https://intrusos.info/doku.php?id=red:switch:juniper:poe&rev=1452855306>

Last update: **2023/01/18 14:38**

